

DoseRAE Pro



User's Guide



Rev. A
June 2013
P/N R04-4001-000

Contents

1	Read before Operating.....	4
2	Warnings.....	7
3	DoseRAE Pro Features.....	8
4.	General Information	9
5	Inserting & Replacing the Battery.....	10
6	User Interface	11
	6.1 LCD Display.....	11
	6.2 User Interface Icons.....	12
7	Turning DoseRAE Pro On.....	13
8	Turning DoseRAE Pro Off	14
	8.1 Low-Voltage Shutoff	14
9	Operation	15
	9.1 Normal Operating Mode.....	15
	9.2 Confirmation Mode	16
	9.3 Programming Mode.....	18
	9.3.1 Entering Programming Mode	18
	9.3.2 Setting Dose Alarm Threshold.....	20
	9.3.3 Setting Dose Rate Alarm Threshold ...	21
	9.3.4 Setting Stay Time Value.....	23
	9.3.5 Setting Chirp Increment Value.....	24

DoseRAE Pro User's Guide

9.3.6	Turning On/Off Alarm Indicators	26
9.3.7	Clearing Accumulated Dose	29
9.3.8	Exiting Programming Mode	30
10	Specifications	30
11	Technical Support	32
12	RAE Systems Contacts.....	34

© Copyright 2013 RAE Systems by Honeywell

1 Read before Operating

This manual must be carefully read by all individuals who have or will have the responsibility of using, maintaining, or servicing this product. The product will perform as designed only if it is used, maintained, and serviced in accordance with the manufacturer's instructions.

FCC Part 15 Class A Equipment

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

DoseRAE Pro User's Guide

FCC Information

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. In cases where the manual is provided only in a form other than paper, such as on a computer disk or over the Internet, the information required by this section may be included in the manual in that alternative form, provided the user can reasonably be expected to have the capability to access information in that form.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

DoseRAE Pro User's Guide

Electronic Waste Disposal



This symbol WEEE (crossed-out wheeled bin) indicates separate collection of waste electrical and electronic equipment in the EU countries.

 This product may contain one or more Nickel-metal hydride (NiMH), Lithium-ion or Alkaline batteries. Specific battery information is given in this user guide.

Batteries must be recycled or disposed of properly. At the end of its life, this product must undergo separate collection and recycling from general or household waste. Please use the return and collection system available in your country for the disposal of this product.

2 Warnings

For safety reasons, this equipment must be operated and serviced by qualified personnel only. Read and understand the user manual completely before operating or servicing.

3 DoseRAE Pro Features



4. General Information

The DoseRAE Pro is an electronic personal dosimeter that can directly read X-ray or Gamma-ray dose equivalent and dose equivalent rate in a rugged, lightweight package. It provides dose measurement, dose rate measurement, and chirp alarms and has many outstanding features such as water resistance, bright flashing LEDs, a loud, 85dB alarm, a vibrating alarm, long battery life, long calibration life, wireless computer interface and dose history management capabilities. The DoseRAE Pro is specially designed for use in nuclear power plants, nuclear fuel and components factories, nuclear waste-processing plants, as well as in radiation source management, nuclear medicine, and environmental monitoring organizations. DoseRAE Pro has dual-channel detectors that employ a semiconductor diode and a scintillation crystal as sensors. It can detect radiation rapidly in a wide energy range, and its energy compensation ensures accurate readings.



5 Inserting & Replacing the Battery

The DoseRAE Pro uses a single AA alkaline battery as its power source. To change the battery:

1. Use a coin or screwdriver to open the cover on the bottom of the unit. Turn the cover counterclockwise to loosen the cover, and then take the cover off.
2. Insert the battery into the compartment with the positive (+) end of the battery facing into the unit. You should see the negative (-) end of the battery.
3. Replace the cover and turn it clockwise to secure the cover.

CAUTION: Wait at least ten (10) seconds after removing the battery before reinstalling a new one.

The DoseRAE Pro is able to use any standard AA battery between 1.25 and 3.2 V. However, for availability, waste disposal, discharge characteristics, and cost reasons, it is recommended that a standard alkaline battery be used.

6 User Interface

The DoseRAE Pro's user interface consists of an LCD display, LED alarms, buzzer alarm, vibration alarm and **MODE** and **SET** buttons. The display provides visual feedback that includes time, functional mode, battery condition, and radiation measurements.


6.1 LCD Display



User interface icons employed on the display are described on the next page.

DoseRAE Pro User's Guide

6.2 User Interface Icons

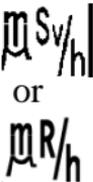Icon	Indication
	Battery status: flashes/solid when battery voltage is low
RATE	RATE icon: flashes during Dose Rate and Dose Rate Warning alarms
DOSE	DOSE icon: flashes during Dose and Dose Warning alarms
	Radiation Measurement: three (3) significant digits, self-ranging
	Dose rate unit: automatically provides correct units for the given measurement ($\mu\text{Sv/h}$, mSv/h , Sv/h) or ($\mu\text{R/h}$, mR/h , R/h)

LCD Backlight

Pressing the **MODE** or **SET** button will turn on the LCD backlight and the backlight will automatically turn off after six (6) seconds, if the **MODE** or **SET** button has not been pressed again.

7 Turning DoseRAE Pro On

Press and hold the **MODE** button for five (5) seconds. As the DoseRAE Pro starts up, the following occurs:


1. The LCD screen illuminates and checks the display segments.



2. The current firmware version is displayed. The LEDs and alarm undergo a self-test.



3. The unit displays the total dose, and is now operating.

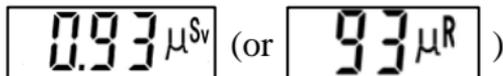

8 Turning DoseRAE Pro Off

With the DoseRAE Pro in normal detection mode (refer to section 9.1), press and hold **MODE** for five (5) seconds. There is a five-second countdown, and when it reaches 0, the word “OFF” is displayed. Release **MODE**, and the display goes blank in three (3) seconds.

8.1 Low-Voltage Shutoff

When the battery voltage is lower than 1.2V in Normal Operating Mode and if there are no alarms, the battery status icon flashes on the LCD and the LEDs flash in green once per minute. When the voltage further drops to lower than 1.0V, or when the DoseRAE Pro continuously operates for 48 hours after its voltage reached 1.2V, the DoseRAE Pro shuts down automatically.

Note: It is not recommended to start data communications between the DoseRAE Pro and the PRR-1 Dosimeter Reader when the instrument is in a low voltage state.

9 Operation


DoseRAE Pro has three (3) operating modes:

- Normal Operating Mode
- Confirmation Mode
- Programming Mode

Normal Operating Mode is the default. After the unit is turned on, it is in Normal Operating Mode, displaying the current accumulated dose reading. Programming Mode is described in section 9.3.

9.1 Normal Operating Mode

In Normal Operating Mode, the DoseRAE Pro measures gamma radiation dose rate and accumulates readings for dosage data. Pressing **SET** steps you through screens displaying the current readings of accumulated dose, dose rate and remaining stay time (only displays when the stay time countdown function is set to “on”).

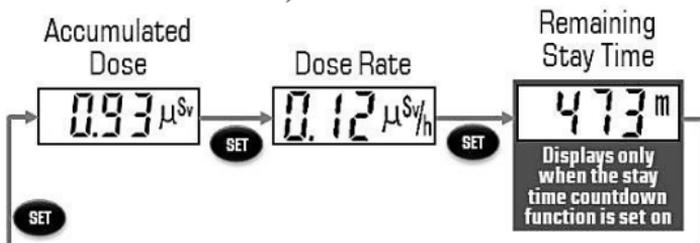

DoseRAE Pro User's Guide

Accumulated Dose: Displays the accumulated dosage (in units of μSv , mSv , Sv or μR , mR , R , automatic ranging) since last reset.

Dose Rate: Displays the dose rate from background to 10 Sv/h or 999 R/h (in units of $\mu\text{Sv/h}$, mSv/h , Sv/h or $\mu\text{R/h}$, mR/h , R/h , automatic ranging).


Remaining Stay Time: Displays a count-down timer of the time remaining until a Stay-Time alarm is activated. If the time left is greater than 999 minutes, 999 minutes will be displayed.

9.2 Confirmation Mode

This mode allows you to check alarm settings and indicator statuses, turn on/off stay time countdown and perform an alarm pattern test. Press **MODE** button from Normal Operating Mode to enter Confirmation Mode.

The following chart shows how to navigate Confirmation Mode (pressing **SET** repeatedly steps through the screens):

DoseRAE Pro User's Guide

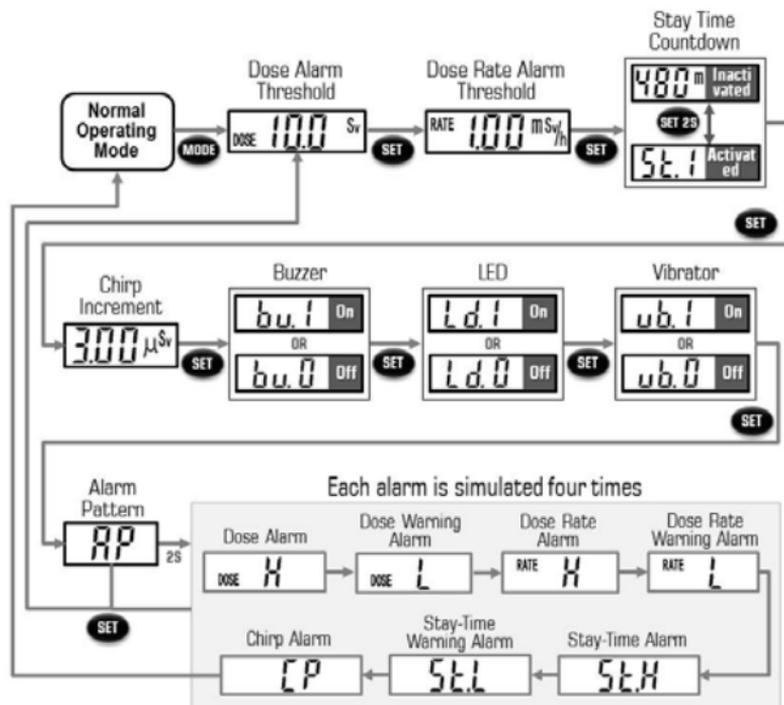

As illustrated in the above figure, to enable or disable the stay time countdown function, press and hold the **SET** button for 2 seconds until the display switches

from **480 m** to **56.1** (i.e., being activated), or the reverse (i.e., being inactivated).

After the alarm pattern test finishes, the unit will automatically return to Normal Operating Mode.

DoseRAE Pro User's Guide

Press the **MODE** button at any point during the Confirmation sequence to return to Normal Operating Mode.

9.3 Programming Mode

This mode allows you to change alarm and instrument settings (such as measurement unit, temperature unit, and time).

Note: If you do not press a key for 60 seconds while the unit is in any submenu of Programming Mode, the display reverts to the next item of the main menu.

9.3.1 Entering Programming Mode

From Normal Operating Mode, simultaneously press and hold **MODE** and **SET** for three (3) seconds. The password entry screen is shown:




Press **MODE** to advance to the next digit, and press **SET** to increase the value of a digit from 0 to 9.

DoseRAE Pro User's Guide


Note: The default password value is “000”.

After the password is input, press and hold **MODE** for three (3) seconds to enter Programming Mode.

Note: If the password input is not correct, an error message screen will be displayed, and the unit remains in Normal Operating Mode.

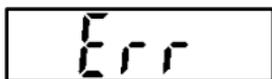


If the password is correct, the screen for dose alarm threshold setting is displayed.

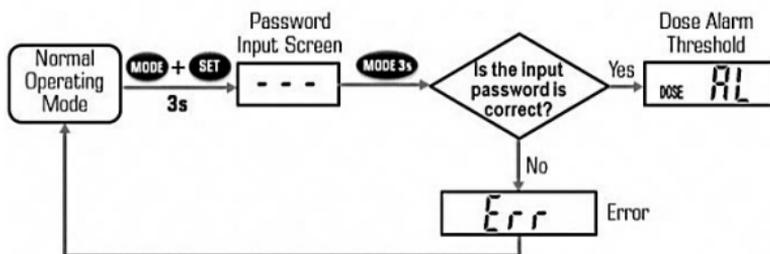

The next chart shows how to navigate Programming Mode using the **MODE** and **SET** keys.

DoseRAE Pro User's Guide

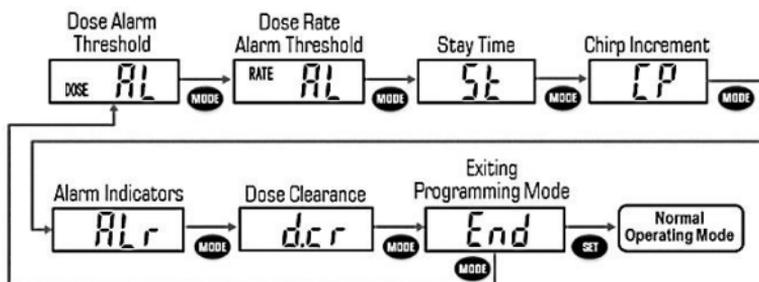

9.3.2 Setting Dose Alarm Threshold

At the menu for setting a threshold at which an accumulated dose of radiation triggers the corresponding alarm, the following screen is shown:



Press **SET** to enter and change the setting. Press **MODE** to advance to the next menu.

The LCD displays the current value. Change the value by pressing **SET**, or return to the previous screen by pressing **MODE**.



DoseRAE Pro User's Guide

To change the value:

1. Press **SET** to increase an active (flashing) digit (0 through 9; it “wraps” back to 0 again after 9).
2. Press **MODE** to advance to the next digit.
3. After moving to the last digit and making changes, press **MODE**. The decimal point starts to flash. Press **SET** to shift the decimal point to the next position on the right.
4. After the decimal point moves to a proper position, press **MODE**. The unit symbol starts to flash. Press **SET** and the symbol changes from Sv to μ Sv to mSv (“wraps” back to Sv when pressing while mSv is displayed).
5. press and hold **MODE** until you see the following screen:




The “dn” is short for “done,” and confirms that you have saved your alarm threshold value. Press **MODE** to advance to the next menu.

9.3.3 Setting Dose Rate Alarm Threshold

At the menu for setting a threshold at which a

DoseRAE Pro User's Guide

radiation dose rate triggers the corresponding alarm, the following screen is shown:

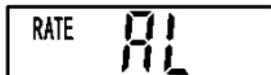

Press **SET** to enter and change the setting. Press **MODE** to advance to the next menu.

The LCD displays the current value. Change the value by pressing **SET**, or return to the previous screen by pressing **MODE**.



To change the value:

1. Press **SET** to increase an active (flashing) digit (0 through 9; it “wraps back to 0 again after 9).
2. Press **MODE** to advance to the next digit.
3. After moving to the last digit and making changes, press **MODE**. The decimal point starts to flash. Press **SET** to shift the decimal point to the next position on the right.
4. After the decimal point moves to a proper position, press **MODE**. The unit symbol starts to flash. Press **SET** and the symbol changes

DoseRAE Pro User's Guide

from mSv/h to Sv/h to μ Sv/h (it “wraps” back to mSv/h when pressing while μ Sv/h is displayed).

5. press and hold **MODE** until you see the following screen:

A rectangular LCD display showing the characters 'dn' in a simple, pixelated font.

The “dn” is short for “done,” and confirms that you have saved your alarm threshold value. Press **MODE** to advance to the next menu.

9.3.4 Setting Stay Time Value

This menu allows you to set the value of a countdown timer. The default value is 480 minutes (8 hours).

Press **SET** to enter and change the setting when the following screen is shown:

A rectangular LCD display showing the number '56' in a simple, pixelated font.

The LCD displays the current value. Change the value by pressing **SET**, or return to the previous screen by pressing **MODE**.

DoseRAE Pro User's Guide

A rectangular LCD display showing the number "480" followed by a small "m" to its right.

To change the value:

1. Press **SET** to increase an active (flashing) digit (0 through 9; it “wraps back to 0 again after 9).
2. Press **MODE** to advance to the next digit.
3. After a proper value is selected, press and hold **MODE** until you see the following screen:

A rectangular LCD display showing the lowercase letters "dn".

The “dn” is short for “done,” and confirms that you have saved your desired stay time. Press **MODE** to advance to the next menu.

9.3.5 Setting Chirp Increment Value

This menu allows you to set the value of Chirp Increment. If it is not set to zero, a chirp or beep will sound each time an accumulated dose equates to the preset value.

Press **SET** to enter and change the setting when the following screen is shown:

DoseRAE Pro User's Guide



The LCD displays the current value. Change the value by pressing **SET**, or return to the previous screen by pressing **MODE**.



To change the value:

1. Press **SET** to increase an active (flashing) digit (0 through 9; it “wraps back to 0 again after 9).
2. Press **MODE** to advance to the next digit.
3. After moving to the last digit and making changes, press **MODE**. The decimal point starts to flash. Press **SET** to shift the decimal point to the next position on the right.
4. After the decimal point moves to a proper position, press **MODE**. The unit symbol starts to flash. Press **SET** and the symbol changes from Sv to μ Sv to mSv (“wraps” back to Sv when pressing while mSv is displayed).
5. press and hold **MODE** until you see the following screen:

DoseRAE Pro User's Guide

A rectangular LCD display showing the characters "dn" in a pixelated font.

The “dn” is short for “done,” and confirms that you have saved your chirp value. Press **MODE** to advance to the next menu.

9.3.6 Turning On/Off Alarm Indicators


This menu allows you to further turn on or off one or more alarm indicators (LEDs, buzzer and vibrator) on the basis that there is always at least one indicator left on.

Press **SET** to enter and change the setting when the following screen is shown:

A rectangular LCD display showing the characters "ALr" in a pixelated font.

The following chart shows how to navigate the menu using the **MODE** and **SET** keys.

DoseRAE Pro User's Guide

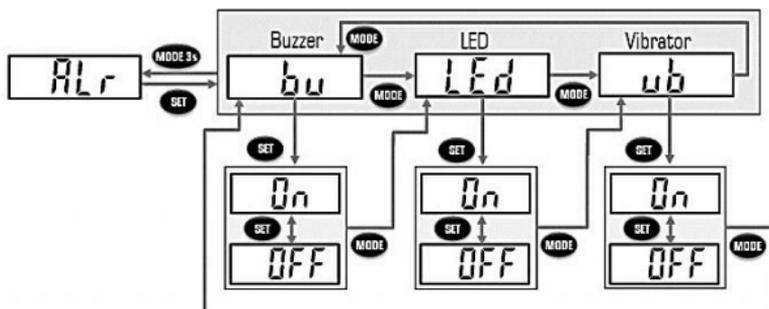

Turning Buzzer On/Off

At the submenu for turning the buzzer on/off, the following screen is displayed:

bu

Press **SET** to change the buzzer alarm from on to off.

OFF

Press it again to change from off to on.

On


Once you are satisfied with your choice, press **MODE** to confirm your selection and advance to

DoseRAE Pro User's Guide

the next submenu.

Turning Visible Alarm (LEDs) On/Off

At the submenu for turning the LEDs on/off, the following screen is displayed:

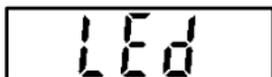

A rectangular LCD display showing the text "LEd" in a seven-segment font.

Press **SET** to change the visible alarm from on to off.



A rectangular LCD display showing the text "OFF" in a seven-segment font.

Press it again to change from off to on.



A rectangular LCD display showing the text "On" in a seven-segment font.

Once you are satisfied with your choice, press **MODE** to confirm your selection and advance to the next submenu.

Turning Vibrator On/Off

At the submenu for turning the vibrator on/off, the following screen is displayed:

DoseRAE Pro User's Guide

A rectangular LCD display showing the text "vib" in a digital font.

Press **SET** to change the vibrator alarm from on to off.

A rectangular LCD display showing the text "OFF" in a digital font.

Press it again to change from off to on.

A rectangular LCD display showing the text "On" in a digital font.

Once you are satisfied with your choice, press **MODE** to confirm your selection. The screen display reverts to that for turning on/off the buzzer.

Pressing and holding **MODE** steps you back to the upper menu.

9.3.7 Clearing Accumulated Dose

This menu allows you to clear the dose history and reset the dose reading to zero.

A rectangular LCD display showing the text "d.c.r" in a digital font.

Press and hold **SET** until you see the following screen:


DoseRAE Pro User's Guide

A rectangular LCD display showing the characters "dn" in a simple, pixelated font.

The “dn” is short for “done,” and confirms that the accumulated dose has been successfully cleared.

9.3.8 Exiting Programming Mode

Press **SET** when the following screen is displayed to exit Programming Mode and enter Normal Operating Mode.

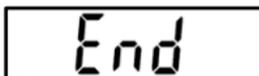A rectangular LCD display showing the characters "End" in a simple, pixelated font.

Note: If you do not press any key for 60 seconds while it is in Programming Mode, the DoseRAE Pro unit exits Programming Mode automatically.

10 Specifications*

Detector	PIN photodiode and CsI (Tl) crystal + PIN photodiode
Applicable radiation type	X-ray and Gamma radiation
Size	52mm x 89mm x24 mm (2.0" x 3.5" x 0.9") excluding a clip
Weight	130g (4.6oz.) with battery

DoseRAE Pro User's Guide

Dose range	0.01 μ Sv to 9.99Sv (1 μ R to 999R)
Dose rate range	0.01 μ Sv/h to 9.99Sv/h (1 μ R/h to 999R/h)
Dose accuracy	\pm 15%
Dose rate accuracy	\pm 20% from 10 μ Sv/h to 9.99 Sv/h (1mR/h to 999R/h) \pm 30% or 0.1 μ Sv/h (10 μ R/h) from 0.01 μ Sv/h to 10 μ Sv/h (10 μ R/h to 1mR/h)
Energy response	50keV to 6MeV for X-ray and gamma radiation
Dose rate response time	5s (dose rate >10 μ Sv/h)
Dose alarm levels	Adjustable from 1.0 μ Sv to 9.99Sv (0.1mR to 999R)
Dose rate alarm levels	Adjustable from 1.0 μ Sv/h to 9.99Sv/h (0.1mR/h to 999R/h)
Datalog	3,000 data points
Shock resistance	Passed drop test from 59" (1.5m) onto hardwood surface
Alarm indicators	Buzzer (> 85dB @30cm), vibrator, and LED's

DoseRAE Pro User's Guide

Chirp	One beep per preset dose increment.
Angle response	0° to 75°: ≤ ±20% for ¹³⁷ Cs ≤ ±50% for ²⁴¹ Am
Display	Segment LCD
Environmental	Operating temperature: -20°C to 50° C Storage temperature: -30°C to 70°C Humidity: 0% to 95% (non-condensing)
IP rating	IP-54
Power	One alkaline AA battery (typically 750 hours)

** Specifications are subject to change*

11 Technical Support

To contact RAE Systems Technical Support Team:

Monday through Friday,

7:00AM to 5:00PM Pacific (US) Time

Phone (toll-free): +1 888-723-4800

DoseRAE Pro User's Guide

Phone: +1 408-952-8461

Email: tech@raesystems.com

12 RAE Systems Contacts

RAE Systems by Honeywell

World Headquarters

3775 N. First St.

San Jose, CA 95134-1708 USA

Phone: +1 408.952.8200

Fax: +1 408.952.8480

E-mail: customerserv@raesystems.com

Web Site: www.raesystems.com

RAE Systems Europe ApS

Kirstinehøj 23 A DK-2770 Kastrup Denmark

Phone: +45 86 52 51 55

Fax: +45 86 52 51 77

orders@raeeurope.com

sales@raeeurope.com

service@raeeurope.com

Web: www.raesystems.eu

DoseRAE Pro User's Guide

RAE Systems UK Ltd

D5 Culham Innovation Centre

Culham Science Centre

Abingdon, Oxon OX14 3DB

United Kingdom

Phone: +44 1865408368

Fax: +44 1235531119

Mobile: +44 7841362693

Email: raeuk@raeeurope.com

RAE Systems France

ZI des Ayats

679390 MILLERY

France

Phone: +33 4 78 46 16 65

Fax: +33 4 78 46 25 98

Email: info-france@raeeurope.com

Web: www.raesystems.fr

DoseRAE Pro User's Guide

RAE BeNeLux BV

Hoofdweg 34C

2908 LC Capelle a/d IJssel

Phone: +31 10 4426149

Fax: +31 10 4426148

Email: info@rae.nl

Web: www.rae.nl

RAE Systems Germany GmbH

Felix-Wankel-Str. 5

82152 Krailing, Germany

Phone: +49 89 20 70 40 248

Fax: +49 89 850 93 74

Email: orders@raeeurope.com

RAE Systems Spain, s.l.

Av. Remolar, 31

08820 El Prat de Llobregat

Spain

Phone: +34 933 788 352

Fax: +34 933 788 353

Mobile: +34 687 491 106

Email: mdelgado@raespain.com

Web: www.raespain.com

DoseRAE Pro User's Guide

RAE Middle East

LOB 7, Ground Floor, Office 19

Jebel Ali Free Zone

Dubai, United Arab Emirates

Phone: +971.4.887.5562

Email: mesales@raesystems.com

RAE Systems (Hong Kong) Ltd.

Room 8, 6/F, Hong Leong Plaza

33 Lok Yip Road

Fanling, N.T, Hong Kong

Phone: +852.2669.0828

Fax: +852.2669.0803

Email: hksales@raesystems.com

RAE Systems Japan

Marunouchi Nakadori Bldg 6F-617-B, 2-3,

Marunouchi 2-Chome, Chiyoda-ku,

Tokyo, 100-0005 Japan

Phone: 81-3-6269-9646

Fax: 81-3-6269-9647

Email: jpsales@raesystems.com

DoseRAE Pro User's Guide

RAE Systems Korea

#1010, DaeMyungAnsVill First,
Sang-Dong 412-2, Wonmi-Gu, Bucheon,
Kyungki-Do, Korea

Phone: 82-32-328-7123

Fax: 82-32-328-7127

Email: krsales@raesystems.com



RAE Systems by Honeywell
World Headquarters

3775 N. First St.

San Jose, CA 95134-1708 USA

Phone: 408.952.8200

Fax: 408.952.8480

Email: customerserv@raesystems.com

Website: www.raesystems.com

Rev. A

June 2013

P/N R04-4001-000